



MB-1

Mobile Fog Machine

User Manual

- English

- 中文



© 2026 Antari Lighting and Effects Ltd.

1. Introduction	1
2. Safety Information	1
3. Package Contents & Inspection	2
4. Machine Details	3
5. Technical Label Information	3
6. Fog Fluid	3
7. Battery Installation, Removal and Precaution	3
8. Setting and Manual Operation	4
9. Control Settings	5
10. MCT-2 Timer Cable Remote (Optional)	5
11. MCR-1F Wireless Remote (Optional).....	5
12. DCP-12 Power Unit (Optional)	6
13. Service and Maintenance.....	7
14. Technical Specifications.....	8
15. Warranty Disclaimer	8
16. Machine Dimension	8
1. 前言	9
2. 安全注意事項	9
3. 包裝內容與檢查	10
4. 機器訊息.....	11
5. 技術標籤資訊	11
6. 煙霧水.....	11
7. 電池安裝，移除及注意事項	12
8. 設定與手動操作說明.....	12
9. 控制設定.....	13
10. MCT-2 有線定時控制器(選配).....	13
11. MCR-1F 無線控制器(選配).....	13
12. DCP-12 電源組(選配).....	14
13. 維護和保養	15
14. 技術規格.....	16
15. 保固聲明	16
16. 機器尺寸圖	16
Appendix I – Grounding Instruction.....	17



User Manual

1. Introduction

Please read all the user manual before operating the machine, and place the manual where the user can refer to it at all time. The manual includes how to install and operate the machine under safe condition and explain all the labels printed on the machine. If you encounter any problem, contact your local Antari dealer for assistant immediately.

2. Safety Information

 DANGER	If the danger is not avoided, it will cause death or serious injury
 WARNING	If the warning is not heeded, it can cause death or serious injury.
 CAUTION	If the precaution is not taken, it may cause minor or moderate injury.



DANGER

- Must connect the machine to the correct rated voltage or it might lead to an electrical shock or a burn and may cause serious consequences.
- Must connect the machine to a protected circuit and ensure it is properly grounded to avoid the risk of electrocution. For grounding instruction, please refer to the last page.
- Do not operate the machine with a bundled power cord, it could lead to a fire hazard.
- When operating the machine, do not point at people, animals, or fire.



WARNING

- Machine's nozzle is extremely hot, please keep at least 50cm distance from the nozzle when the machine is running.
- Please operate the machine on a flat, level hard and well ventilated surface area, reserve at least 50cm space around the machine and make sure there is no flammable gas or material nearby.
- Do not disassemble, repair or modify the machine, it may cause damages, malfunction, risk of electrical shock or result in fire.
- The machine can only be operated by adults or professionals, is not intended for use by person with reduced physical sensory, mental capabilities, or lack of experience and knowledge including children.
- Do not leave the machine running unattended, make sure all powers are off when leaving.
- Children should be supervised to ensure that they do not play with the machine.
- Do not use the machine upside down or tilt it, it might cause damages or malfunction.
- Please store the fluid inside in a well ventilated area without direct sunlight and keep out of reach of children. In case of eye contact or accidentally swallow the fluid, please seek medical attention immediately.



CAUTION

- Keep the machine dry at all time. The machine is not waterproof, do not expose the machine to water, rain, or moisture environment.
- Please make sure the power outlet is not damaged or loose before plug in the power cord.

- If the power cord is damaged, it must be replaced by Antari or its local dealers, otherwise the warranty will be void.
- Before operating the machine, please sure the fluid is filled in the fluid tank to avoid the pump in idling state which could lead to overeat or malfunction.
- Before transporting the machine, please make sure the fluid is drained and tank is empty. (Recommend using original package)
- The machine is for indoor use only.
- Do not operate the machine in any area with unstable voltage.
- If you experience strange sound or malfunction, turn off the power and unplug the power cord immediately and contact your local Antari dealer for assistant.
- Do not contact any moving part.
- Only use accessories recommended or sold by Antari.
- Please make sure the power is off when not using the machine and unplug the power cord if not intend to use for a long period of time.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Unplug from outlet before servicing or cleaning.
- Do not operate the machine with a damaged cord or plug, or after the machine malfunctions or is dropped or damaged in any manner. Return machine to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- To ensure the lifespan of the machine, please only use the fluid manufactured by Antari, do not use other fluid or additive, otherwise it may clog the heater and cause malfunction.

Before operating the machine, please read all warning labels on the machine, description as below;

Bottom Printing

CAUTION!

Remove battery when not in use

Empty fluid tank before transporting

Do not operate without fluid

Only use Antari recommended fluid

Do not add any flammable material

3. Package Contents & Inspection

3.1 Package Contents

Immediately upon receiving the machine, carefully unpack the carton, check the content to ensure it is the correct model and all parts are included. If any part appears to be damaged or missing during transportation, please contact your local dealer and return in original package for inspection.

1 x MB-1 Mobile Fog Machine

1 x Battery

1 x Battery Charger

1 x FLM-05S Fog Fluid


1 x Flight Case

1 x Quick Start Guide

3.2 Optional Accessories

Item Code	Description
MCT-2	Timer Cable Remote
MCR-1F	Wireless Remote
DCP-12	Power Unit

4. Machine Details

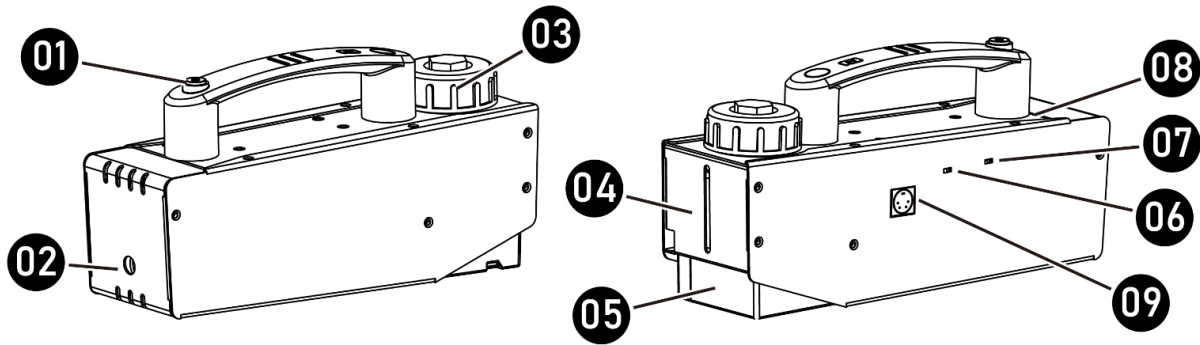

01. Button	06. Volume Adjust Button (Low/High)
02. Nozzle	07. Mode Switch (Momentary/Latching)
03. Fluid Tank Cap	08. S-Terminal Connector
04. Fluid Indicator	09. Machine Statue Indicator
05. Battery	

5. Technical Label Information

Please read the technical label information on the back of the machine before operating it.

1 XXXX 2 INPUT VOLTAGE: 3 FREQUENCY: DC XXV XXXW MADE IN TAIWAN XXXXXXMMYYXXXXXX 4 Scan It for User Manual 5	
1. Model Name	4. QR CODE for User Manual
2. Input Voltage	5. Serial No.
3. Frequency	

6. Fog Fluid


	CAUTION	Always turn off the power before filling the fluid tank. Do not add flammable liquid to the fluid tank. If fluid gets inside the machine, please contact your local Antari dealer for assistant.
--	----------------	--

- Only the fog fluid manufactured by Antari can be used, do not mix or dilute the fog fluid. Due to improper storage or using other fluid might clog the heater and cause malfunction.
- The machine is tested and calibrated with the specific fog fluid (FLM-05S) to get the best performance.
- Please empty the fluid in the tank before switching to another fluid to avoid mixing.
- Only the essence manufactured by Antari can be used, and add according to the ratio recommended by Antari (Recommended ratio is 1:1000), if using other essence or different ratio might clog the heater and cause malfunction.
- The warranty on your fog machine will be void if you use fog fluid not manufactured by Antari.


7. Battery Installation, Removal and Precaution

Upon receiving the product, please charge the battery for 3 hours to reach a full charge. To maintain optimal battery performance, ensure the battery is fully charged before and after each use (refer to sections 13.1 and 13.2 for battery-related details).

When installing the battery, ensure the labeled side (sticker) is facing upward, the silver latch is used to secure the battery in place. Please refer to the graph below.

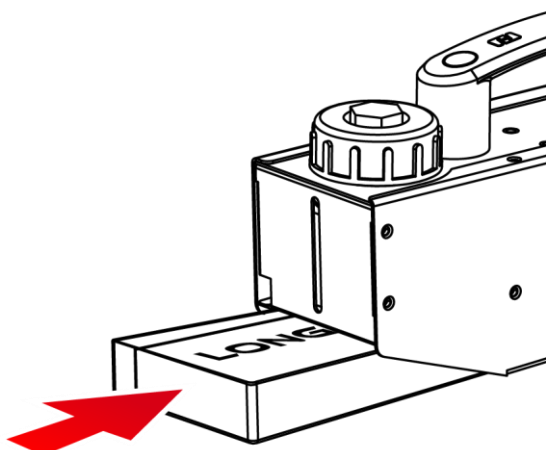

To remove the battery, flip the silver latch upward and pull out the battery. Please refer to the graph below.

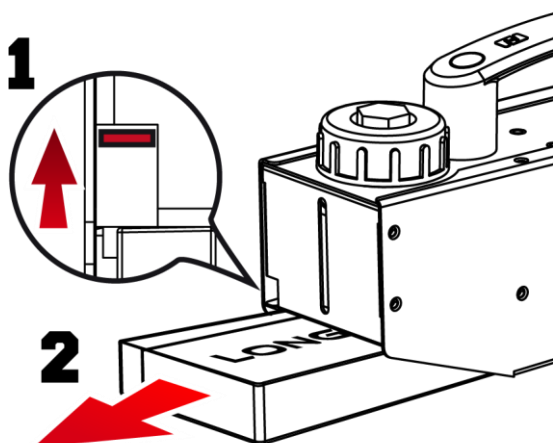

8. Setting and Manual Operation

	WARNING	Do not charge the battery while fogging or switch is on.
---	----------------	--

- Step 1.** Place the machine on a flat, level hard and well ventilated surface area and reserve at least 50cm open space around the machine, and make sure there is no flammable gas or material nearby;
- Step 2.** Fill the fluid tank with Antari approved fog fluid (FLM-05S);
- Step 3.** Please refer to Section 7 for battery installation; If using power base, before connect the machine to the power outlet, please read the technical label on the back of the machine and make sure the power outlet is the correspond to the rated voltage for the machine;
- Step 4.** Turn on the machine, warm up process takes approximately 10 seconds. Once the machine has reached operating temperature, the LED indicator light will be constant green; Now the machine is ready for operation;
- Step 5.** There are 2 switches on the machine;
- Step 6.** In “Latching Mode”, to start fogging, press the button, and to stop fogging, press the button again, toggle button to adjust the output (Low/High) on the side of the machine;

- Step 7.** In “Momentary Mode”, to start fogging, press and hold the button, to stop fogging, release the button, toggle button to adjust the output (Low/High) on the side of the machine;
- Step 8.** To turn off the machine, please make sure the machine is not operating then turn of the power. If you will not use the machine a long period of time, please remove the power cord.

9. Control Settings

MB-1 Mobile Fog Machine can be operated in the following modes. The machine can only accept 1 type of signal at a time. When using different control modes at the same time, the machine will work according to built-in control priority as follow:

- Manual
- Timer
- Wireless
- Cable Remote

9.1 LED Status Indicator

Status	LED Indicator
Ready to Fog	Constant Green Light
Battery Low	Flashing Red Light
Heater Malfunction	Cross Flashing Red/ Yellow Light

10. MCT-2 Timer Cable Remote (Optional)



MCT-2 Timer Cable Remote is an optional accessory for MB-1 Mobile Fog Machine, please see instruction below;

Button/Knob	Function
DURATION [KNOB]	Adjust Duration
INTERVAL [KNOB]	Adjust Interval
POWER [RED BUTTON]	Power On / Off
FOG [GREEN BUTTON]	Fogging On / Off
TIMER ON/OFF [YELLOW BUTTON]	Timer Mode On / Off

** If you encounter any problem, please contact your local Antari dealer for assistant

11. MCR-1F Wireless Remote (Optional)



MCR-1F Wireless Remote is an optional accessory for MB-1 Mobile Fog Machine, it included a W-1 wireless transmitter and a cable wireless receiver. If you purchased the wireless model, it's ready to use. If you purchase the MCR-1F Wireless Remote afterwards, please follow the instruction below. If you encounter any problem, please contact your local Antari dealer for assistant.

11.1 W-1 Wireless Transmitter

- Battery : 27A 12V
- Effective Range : The effective range is approximately 50 meter, depends on actual condition, it may vary.
- W-1 wireless transmitter has 2 buttons, each function as follow:

Button	Function
[A]	Start Fogging
[B]	Stop Fogging



W-1 Wireless Transmitter

11.2 Pair

Each receiver can pair up to 5 transmitters, please follow the steps below to pair or unpair the transmitter;

To Pair

Step 1. Connect the cable wireless receiver to S-Terminal connector on the side of the machine.

Step 2. Press and hold [A] to pair.

12. DCP-12 Power Unit (Optional)

DCP-12 Power Unit is an optional accessory for MB-1 Mobile Fog Machine, can use this as an alternative power source for the machine.



13. Service and Maintenance



DANGER!

Disconnect the power cord before starting maintenance operation!


- Always keep the machine clean.
- Can use air compressor, vacuum or a soft brush to remove the dust on the machine.
- Can use a slightly damp cloth to clean the casing.
- Before store the machine, please make sure the machine is completely cool down to avoid moisture inside causing malfunction.
- It is recommended to run the machine at least once a month in order to maintain the machine's best performance and output condition.
- Excessive dust and build up liquid residue will reduce the performance and cause overheat.

13.1 Rechargeable Lead-Acid Battery Maintenance

To ensure the lifespan and performance of the rechargeable battery, please follow the instruction below;

- **Initial Charge:** Upon receiving the product, please charge the battery for 3 hours to reach a full charge.
- **Daily Use:** To ensure peak performance, fully charge the battery before and after each use.
- **Self-Discharge:** Batteries will self-discharge when not in use; please check the battery status every 2–4 weeks.
- **Long-term Storage:** Even if the device is not being used, fully charge the battery once every 2–3 months.
- **Low Battery Alert:** If the battery level becomes critically low, please recharge it within 1 hour.
- **Environmental Factors:** Please note that ambient temperature and humidity can affect battery capacity and runtime.

13.2 Charging Battery

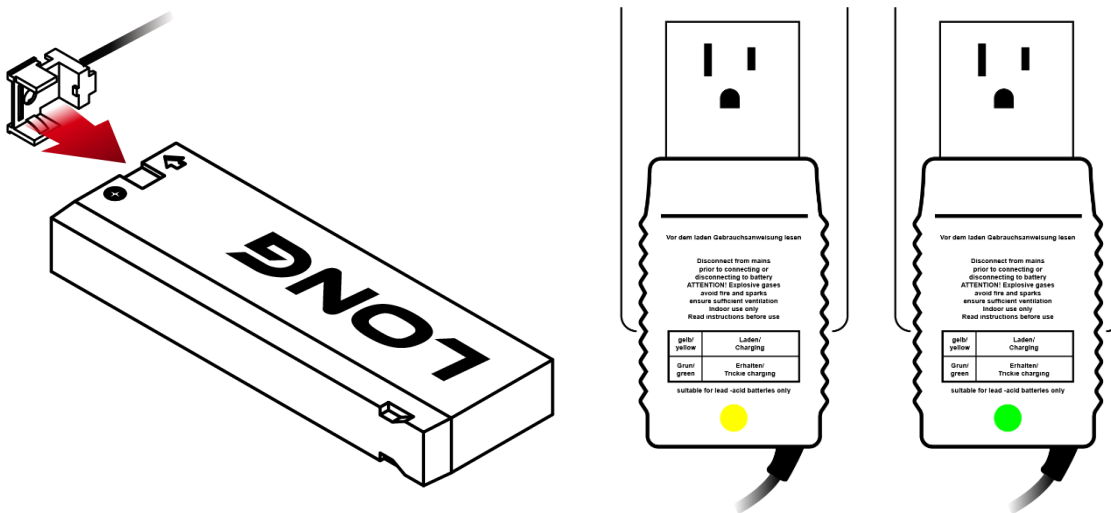

Step 1: Connect the battery to the charging connector.

Step 2: A yellow light indicates charging is in progress; a green light indicates charging is complete.

Step 3: Once fully charged, the operating time is approximately 10–12 minutes.


14. Technical Specifications

MB-1	
Input Voltage	DC 12V (Rechargeable Battery) AC 100 - 240V, 50 /60 Hz (Battery charger)
Rated Power	75W
Warm-Up Time	1 Second (approx.)
Fluid Consumption	1.1 ml/min (100% Output)
Fluid Tank Capacity	110 ml (0.03 Gallon)
Compatible Fluid	Antari FLM-05S Fog Fluid
Ambient Temp. Range	0 °C - 40 °C (32 °F - 104 °F)
Control Methods	Manual Timer (Optional) Wireless (Optional) Cable Remote (Optional)
Included Accessories	FLM-05S Fog Fluid 500ML Flight case BAT-01 Battery MB-1-BCL Charger
Optional Accessories	MCT-2 Cable Timer Remote MCR-1F Wireless Remote DCP-12 Power Adaptor and Dummy Battery
Dimension	L225 W67 H113 mm L8.86 W2.64 H4.49 inch
Weight	Without Battery 1.0 kg 2.20 lbs. With Battery 1.8 kg 3.97 lbs.

15. Warranty Disclaimer

We guarantee the merchandise manufactured by us to be free from defect in material and workmanship for a period of one year. Our obligation and liability under this warranty shall be restricted to repair or replacement at our factory or local authorized dealer. We assume no liability of the products that are improperly used or used for any purpose other than that for which they are specially designed. This warranty shall not apply to any merchandise which has been repaired, altered or assembled outside our factory in any way so as in our judgment to affect its performance, nor which has been subjected to misuse, negligence, or accident nor to any merchandise operated contrary to our printed instructions. We will not allow or be liable of any loss or any damages of any kind in connection with the use, sale, or repair of any merchandise purchased from us.

16. Machine Dimension

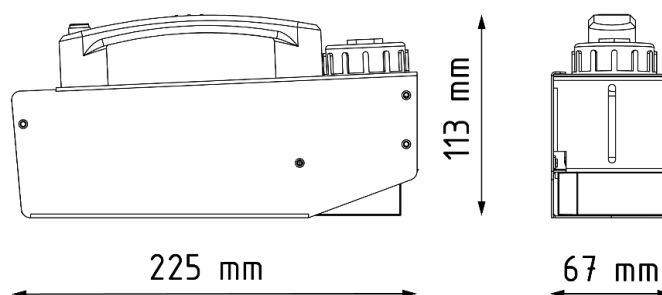



中文使用說明書

1. 前言

在操作本機器之前，請務必仔細詳閱本說明書然後請將本說明書放置在機器使用者可隨時查閱之處存放。此說明書包含如何安全的安裝及操作本機器以及說明所有在機器上的標示。如果您有任何操作上的問題，請立即聯繫當地的 Antari 經銷商尋求協助。

2. 安全注意事項

 危險	若不確實避免這些指示，可能導致嚴重人身傷害甚至死亡。
 警告	若不確實遵循這些指示，可能導致嚴重人身傷害甚至死亡。
 注意	若不確實注意這些指示，可能導致人身傷害甚至死亡，嚴重程度視情況而定。



危險

- 請務必使用正確電壓。如果使用錯誤電壓，可能會遭受危險的電擊燒傷或更嚴重的後果。
- 請務必將機器連結到有保護的電路，並確保有正確地接地，以避免觸電的危險。關於接地方式請參考最後一頁。
- 請勿在捆綁電源線的情況下使用，可能會發熱導致火災。
- 操作機器時請勿將機器對著人體、動物或火焰使用。



警告

- 機器的噴嘴非常燙。當機器工作時，請遠離噴嘴 50 公分以上。
- 請於堅固、平坦、穩定且通風良好的表面上使用機器。請勿遮蓋機器散熱部份，機器周邊至少應保留 50 公分的空間並確認附近沒有易燃性物質或可揮發性氣體。
- 請勿隨意拆卸、修理或改造機器，這可能會導致機器故障、損壞、觸電危險或造成火災。
- 本機器僅限有行為能力之成人或專業人員操作，不預期提供生理、感知、心智能力、經驗或知識不足者之使用者(包含孩童)使用本機器。
- 請勿在無人看管時讓機器運作，並於外出離去時確實關閉電源。
- 孩童應受監督，以確保孩童不能操作或嬉戲玩本機器。
- 請勿將機器倒放或傾斜使用，可能導致機器動作不正常或損壞。
- 請將液體存放在室內孩童無法取得之處，保持通風及避免陽光直射。如果有觸碰眼睛或誤食機器，請立即尋求醫生的協助。



注意

- 本機器無防水設計，請隨時保持機器乾燥，嚴禁將其潑水、浸水、淋雨或放在潮溼的環境。

- 在插入電源插座前，請確認電源插座無損壞或鬆動。
- 若電源線損壞，必須使用原廠電源線或組件進行更換，否則將導致保固無效。
- 請在使用機器之前，先填裝好煙霧水，避免機器幫浦空轉過熱造成損害。機器在搬運前或使用完畢後，請清空油桶。
- 在運輸本機器前，請確認機器的油箱已清空並且包裝完整。(建議使用原廠包裝)
- 本產品僅限室內使用。
- 請勿在電壓不穩定的地區使用本機器。
- 如果機器出現異常聲音或有任何不正常現象時，請立即停止工作，將電源關閉及拔下機器電源線，並請聯繫當地的 Antari 經銷商尋求協助。
- 請勿觸碰機器內部運轉零件。
- 只能使用原廠建議或販售之配件。
- 請確認機器不在使用的狀態下電源已關。如果長時間不使用機器，請拔掉電源線。
- 關閉機器時，將所以控制開關轉到關閉的位置，然後再將插頭從插座拔除。
- 拔除電源線時，請抓住插頭不是電線。
- 在保養及清潔前，請把電源線從插座拔除。
- 在電線或插座有損毀、機器故障或有掉落或損壞的情形發生時，請勿操作機器。請將機器送回最近的維修站，做檢查、維修及電源或機械的調整。
- 為確保機器的使用壽命，請使用 Antari 原廠製造之煙霧水，勿使用其它非 Antari 原廠製造煙霧水或添加劑，否則可能會導致電熱管阻塞和故障。

在使用本機之前，請詳細閱讀機器上的警語標示，說明如下：

底座印刷

CAUTION! 警告!

Remove battery when not in use 不使用時請將電池拿出

Empty fluid tank before transporting 運輸前請將液體請空

Do not operate without fluid 請勿在沒有液體的情況操作本機器

Only use Antari recommended fluid 限用 Antari 建議之液體

Do not add any flammable material 請勿添加任何易燃物質

3. 包裝內容與檢查

在收到機器後，請立即小心地打開包裝紙箱，檢查所有內容，確認您所購買的機型及配件。如果有任何部件因運輸過程出現損壞或缺少，請立即連絡經銷商，並以原包裝退回檢查。

3.1 包裝內容

1 x MB-1 手提式煙霧機

1 x 電池

1 x 電池充電器

1 x FLM-05S 煙霧水


1 x 飛行箱

1 x 快速入門指南

3.2 選配說明

品項	描述
MCT-2	有線定時控制器
MCR-1F	無線控制器
DCP-12	電源組

4. 機器訊息

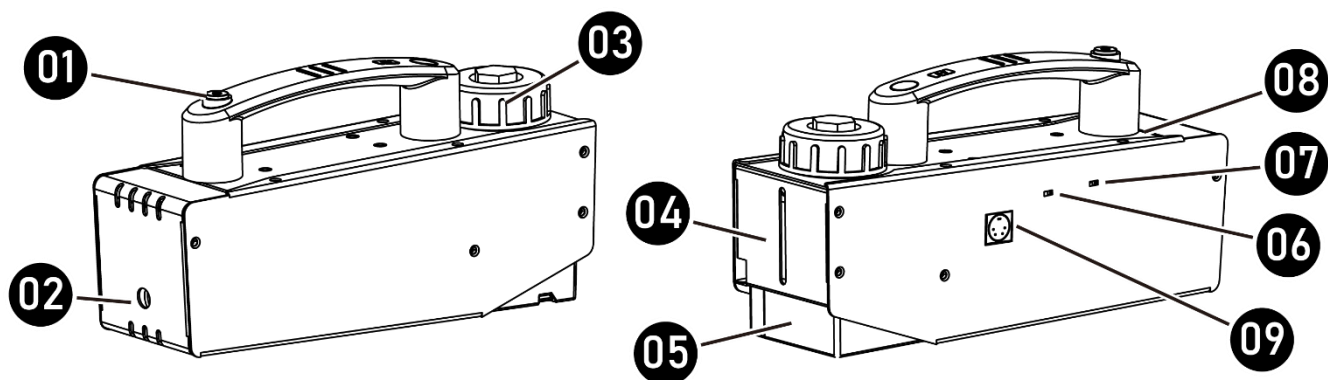

01. 按鈕	06. 煙量調整鍵 (LOW/HIGH)
02. 噴煙口	07. 模式切換鍵 (MOMENTARY/LACHING)
03. 油桶蓋	08. 機器狀態指示燈
04. 油量顯示	09. S 端子連接頭
05. 電池	

5. 技術標籤資訊

使用本機器前，請詳閱技術標籤上的訊息

1 XXXX 2 INPUT VOLTAGE: 3 FREQUENCY: DC XXV XXXW MADE IN TAIWAN XXXXXXMMYYXXXXXX 4  Scan It for User Manual 5 	
1. 機器型號	4. 說明書 QR CODE
2. 工作電壓	5. 機器流水序號
3. 頻率	

6. 煙霧水


	危險	將液體加入機器之前，請務必先拔除電源線。請勿添加易燃液體。如果發現液體流入機器內部，請洽 Antari 原廠或其經銷商尋求協助。
---	-----------	--

- 僅能使用 Antari 原廠製造之煙霧水，不可混用或稀釋。若因保存不當而變質或使用非原廠煙霧水，將可能造成電熱管堵塞而導致機器故障。
- 本機器是使用專屬的煙霧水(FLM-05S)做測試與校正來取得最佳的效能。
- 如需更換另一種液體，請在使用前，先將油桶中的液體清空，以避免混合。
- 僅能使用 Antari 原廠製造之香精，並依照原廠建議比例添加(原廠建議比例為 1:1000)，如果使用非原廠的香精或比例添加有誤，將可能造成電熱管阻塞而導致機器故障。
- 如果使用非原廠製造之煙霧水或香精而導致煙霧機損壞將不在保固範圍內。


7. 電池安裝，移除及注意事項

收到產品後，請先充電 3 小時將電池充飽，請在每次使用前及使用後將電池充飽，以維持電池最佳效能。(電池相關事項請參照”13.1”及”13.2”)。

電池安裝時注意將電池的貼紙面朝上，請參照下圖，銀色卡榫為固定電池之用。

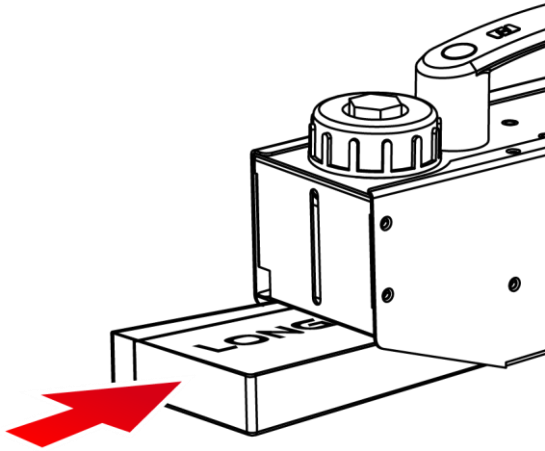

電池移除請參照下圖，先將銀色卡榫向上撥之後在抽出電池。

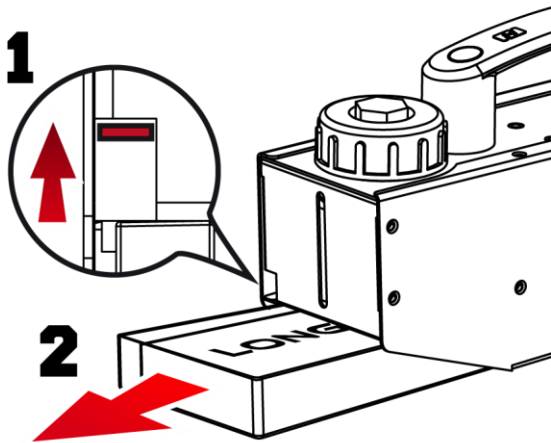

8. 設定與手動操作說明



警告

請勿在使用機器時或電源開啟時，進行充電。

- 步驟1. 將機器平放在堅固、平坦、穩定且通風良好的表面上，機器周圍至少應保留 50 公分的空間並確認附近沒有易燃性物質或可揮發性氣體;
- 步驟2. 使用 ANTARI 原廠專用煙霧水(FLM-05S)注入機器所附的油桶;
- 步驟3. 電池安裝至機器請參照”7”; 如果使用電源供應器，請將機器連接電源，連接之前，確認機器背後技術標籤上所標示要求功率，是否與電源插座相符;
- 步驟4. 電源接入後，待機器上方 LED 指示燈恆亮綠色，表示機器已經準備好可進行操作;
- 步驟5. 在機身上兩組開關;
- 步驟6. 在”Latching Mode”時噴煙模式為，按一下按鈕開始噴煙，再 按一下按鈕停止噴煙，另一組開關調整輸出大小(LOW/HIGH OUTPUT);
- 步驟7. 在”Momentary Mode” 噴煙模式為，按著按鈕開始噴煙，放開按鈕停止噴煙，另一組開關調整輸出大小(LOW/HIGH OUTPUT);

步驟8. 需關閉本機時，請確認機器已停止運轉，再將電池或電源移除。

9. 控制設定

MB-1 手提式煙霧機可以使用下列操作模式，機器每次接受一種訊號。當同時使用多種訊號時機器將根據原廠內建訊號的優先順序來進行工作：

- 手動控制
- 定時控制
- 無線控制
- 有線控制

9.1 LED 指示燈訊息

狀態	LED 指示燈
機器準備好噴煙	綠燈恆亮
電池電量不足	紅燈閃爍
電熱管異常	紅燈/黃燈交叉閃爍

10. MCT-2 有線定時控制器(選配)



MCT-2 有線定時控制器是 MB-1 手提式煙霧機的選購配件，使用方法如下：

按鈕/旋鈕	功能
DURATION[旋鈕]	調整輸出時間
INTERVAL[旋鈕]	調整間隔時間
POWER[紅色按鈕]	電源 開/關
FOG[綠色按鈕]	開始/停止噴煙
TIMER ON/OFF[黃色按鈕]	定時模式 開/關

******如果有任何問題，請聯繫當地的 Antari 經銷商尋求協助。

11. MCR-1F 無線控制器(選配)



MCR-1F 無線控制器組包含一個 W-1 的無線發射器及 W-1 無線接收器，此為 MB-1 手提式煙霧機的選購配件。若您採購的版本已含無線功能即已安裝至機器上，可直接使用。若是後續採購 MCR-1F 無線控制器，請按照下方說明進行安裝與配對。如果遇到任何困難與問題，請與當地的 Antari 經銷商尋求協助。

11.1 W-1 無線發射器&無線接收器

- 發射器：使用 27A 12V 電池
- 收發距離：有效距離為 50 公尺，實際收訊狀況根據現場環境因素而有所不同。
- W-1 無線發射器配有 2 個按鈕，控制功能為：

按鈕	功能
[A] 鍵	啟動噴煙
[B] 鍵	關閉噴煙



W-1 無線發射器

11.2 配對

每個接收器可以配對最多 5 個控制器，請參考下面步驟配對和取消配對控制器。

配對

步驟 1：將接收器接上 MB-1 機身上的 S 端子；

步驟 2：長按發射器上的[A]開始配對。

12. DCP-12 電源組(選配)

DCP-12 電源組是 MB-1 手提式煙霧機的選購配件，作為另外一種機器電源供應；



13. 維護和保養



危險!

維修保養之前，請務必拔除電源線！



- 隨時保持機器清潔。
- 可以使用空氣壓縮機、吸塵器或軟刷除去機器上的灰塵。
- 機殼可使用濕布擦拭。
- 在存放或收起機器前，請確認機器完全冷卻，避免機器內部潮濕導致故障。
- 建議每月至少讓機器運轉一次，以保持機器處於最佳的性能和輸出條件。
- 機器上過多的灰塵、液體殘餘累積的髒污會降低機器工作性能，導致散熱不良。

13.1 充電電池的維護

確保充電電池的壽命及效能，請參考下列

- 收到產品後，請先充電3小時將電池充飽，請在每次使用前及使用後將電池充飽。
- 電池在不使用時會自我放電，請每2-4週檢查一下電池。
- 每2-3個月將電池充飽一次。
- 果電池電力過低，請在1小時內將其充電。
- 周遭環境的溫度及濕度會影響電池的容量。

13.1 電池充電

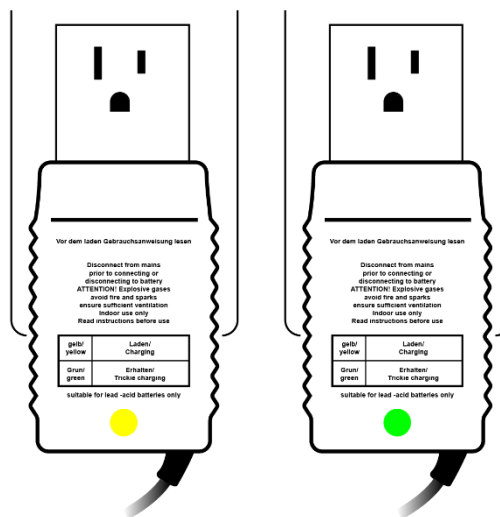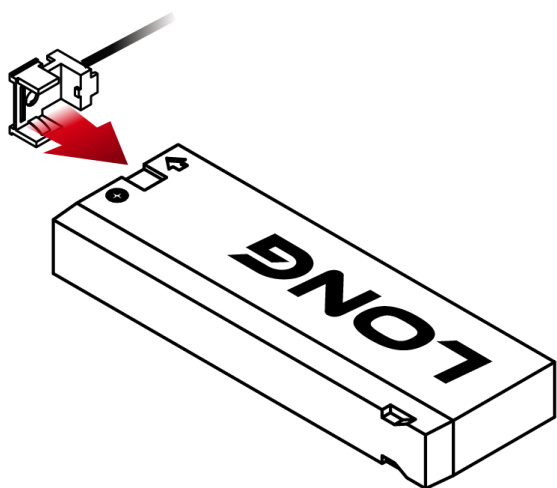

Step 1: 將電池接上充電接頭。

Step 2: 黃燈為充電中，綠燈為充電完成。

Step 3: 充電完成後約能用 10-12 分鐘。


14. 技術規格

MB-1	
輸入電壓	DC 12V (充電式電池) AC 100 - 240V, 50 / 60 Hz (充電器)
額定功率	75 瓦
加熱時間	約 1 秒鐘
耗油量	1.1 毫升/分鐘 (100% 輸出)
油桶容量	110 毫升 (0.03 加侖)
適用煙霧水	Antari FLM-05S 煙霧水
適用環溫	0°C - 40°C (32°F - 104°F)
控制模式	手動控制 定時控制 (選配) 無線控制 (選配) 有線控制 (選配)
隨附配件	FLM-05S 500 毫升煙霧水 飛行箱 BAT-01 充電電池 MB-1-BCL 電池充電器
選購配件	MCT-2 有線定時控制器 MCR-1F 無線控制器 DCP-12 假電池與電源轉換器
尺寸	長 225 寬 67 高 113 公釐 長 8.86 寬 2.64 高 4.49 英寸
重量	無電池 1.0 公斤 2.20 磅 含電池 1.8 公斤 3.97 磅

15. 保固聲明

本公司保證我們的商品在一年內沒有材料和製作缺陷。我們在本保證下的義務和責任僅限於在原廠或當地授權經銷商進行的維修或更換。我們對不當使用或用於非專門設計目的以外之用途不承擔任何責任。本保固不適用於以任何方式在原廠或當地授權經銷商外修理、改動或組裝的任何商品，以便我們判斷影響其性能，沒有受到誤用、疏忽或事故的影響，也沒有違反我們的任何商品操作印刷說明。本公司對於從我們這邊購買的商品不會允許也不對於使用、銷售或修理任何產品有關的任何類型的任何損失或損害承擔責任。

16. 機器尺寸圖

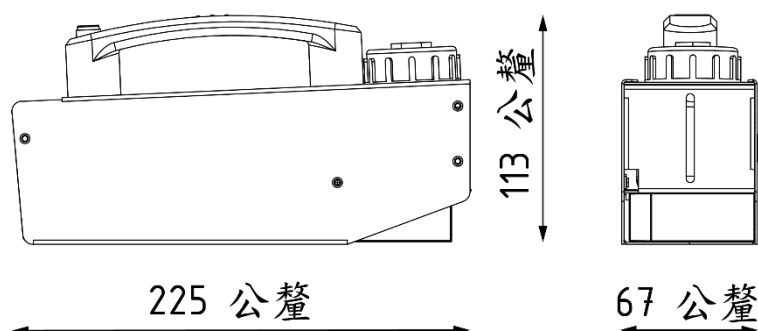

Appendix I – Grounding Instruction

This appliance must be grounded. In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Figure. A temporary adaptor, which looks like the adaptor illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adaptor should be used only until a properly grounded outlet can be installed by a qualified electrician. The green colored rigid ear, lug, and the like, extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by the metal screw.

